Manual MP4 Watch

Foreword
Thank you for using our digital MP4 watch player.
To enable you to operate the unit as soon as skilled, we were equipped with a detailed user manual, which you can get the product introduction, usage, system settings, and safety precautions in all aspects of knowledge.
In the use of your digital product, please be sure to carefully read all the information distribution in order to help you to better use the product's features.
In the preparation of this manual we are very careful and rigorous, and that the manual provided information is correct and reliable, but inevitably there will be errors and omissions, please bear with more and look forward to your correction.
Information in this manual is subject to change without notice. If you use the product found in the process you can not resolve the problem, please call our hotline or visit our website for the latest product information.
Notes:
This section is for users of the proper use of players, to ensure good performance and set the player, please carefully read and follow.
Do not seriously impact the host.
λ Do not contact with benzene, thinner and other chemicals.
λ Do not go near a strong magnetic field, electric field.
λ Avoid direct sunlight or heating appliances.
λ Do not disassemble, repair, alteration.
λCycling, driving cars and motorcycles, do not use the player in order to avoid danger.
λ Do not listen to a larger volume, so as to avoid adverse effects on hearing.
λPackaging waste, batteries, used electronic products, classified properly.

Basic functions
1, the music player: supports WMA, WAV, MP3 and other players.
2, sound recording support: support FM, MIC recording. Format support WAV.
3, Photo support: JPEG, BMP, GIF format browsing
4, Video playback support: AMV, AVI (need conversion tool to convert, but on the PC using the ordinary tools avi player to play) format video playback.
5, FM Radio support.
6, The time display and calendar support

Key features
1. M key (MENU): Menu menu button, press the function M: pop-up menu (short press on the main interface shows the clock) Press: back to the main interface.
2. ⏮ button (PREV): Select the previous option or file.
3. ⏭ button (NEXT): select the next option or file.
4. ⏯ button (PLAY): Power / Play / Stop button. Enter key

Off
Press PLAY button to switch to display the clock, press again to enter boot interface
Note: When the player and PC connectivity or charging, this function is invalid.
Low battery
When the battery power appears low, the player will be prompted to the screen, and then automatically shut down into standby mode, do not restart at this time, please charge.

System Configuration
Operating System: Windows XP & Vista/2K/ME/98 (need to install driver) / Mac OS 10
CPU: at least Pentium-133MHz
Memory: At least 32MB
Free hard disk space: at least 100MB
Video Card: 640 * 480 above model, at least High Color (16 bit)
USB port
CD-ROM drive
And PC connectivity
In the boot state, with the supplied USB cable to connect PC with the player, PC will be prompted to select the Removable Disk window appears. Select the appropriate folder to copy files to each other.

Music
Select music applications, the ⏯ key to enter the music player interface

Music player interface

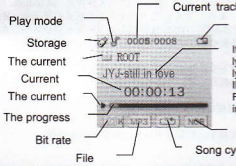

Press⏯ the switch between music playback and stop by and compared with the ⏮previous file or ⏭ next file. You can press⏮ fast forward and⏭ rewind.
Play modes: Normal playback display

Menu Options
1. The music stops playing status, press the M, the system enters a sub menu, menu options include: volume control, card catalog, delete files, delete all, exit.

2. In the state of music is playing, press the M, the system into two sub-menus, menu options include: volume control, loop mode, EQ mode, video settings and exit.

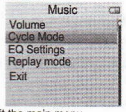

If you press M, to exit the main menu

3. Press and to select the Browse menu. Press M to open options, or return to the upper screen, press to confirm the selection (with other applications.)

Sub-menu One
Card catalog: Display card disk all the files. Press M to enter the card catalog to choose lower-level subdirectories. Root storage card root directory file. Record audio files stored in the default folder.

Delete files: Delete files under the current directory, press M to enter the file list, press enter delete the file interface, select the check

Consumer deleted or OK to delete, then confirm the selection.

Delete all: delete all files under the current directory. Operating Ibid.

Sub Menu Two
Cycle Mode: Press M to confirm the selection

Cycle Mode	Logo	Description
Normal mode		Order of play all the files
Repeat		Loop current track
List of Play		Order of play the current directory files.
Directory recycling		Loop current directory files.
Full Cycle		Loop all the files.
Full Cycle		Shuffle files in the directory.
Browse Play		Browse play the file, each track Yulan 10 seconds.

EQ Mode: Select the desired audio mode: natural, rock, pop, classical, soft, jazz, heavy bass
Icon corresponding to a variety of EQ modes

Nature	NOR
Rock	ROCK
Pop	POP
Classical	CLAS
Soft	SOFT
Jazz	JAZZ
Bass	DBB
SRS WOW	SRS

Repeat setting
1. Repeat mode
①. Select the repeat mode option, the system will return to music player interface, LCD sign on the upper left corner to increase repeat that enter the repeat function. At this point A (repeat starting point) is blinking. Press, confirm that the starting point selected after the current time for the repeat, B (repeat end point) starts flashing. Then, to confirm the selection end time. The AB repeat set.
②. The system will set the time interval between repeat number and repeat begin repeat.
③. Press M to exit repeat music player interface, the interface returns.
2. Repeat times: Repeat times and settings by :1-10. Recognized by M to return music player interface.
3. Repeat interval: Set the minimum time between two repeat interval of 10 seconds,
1- optional. Operation with the repeat times.
Movie

1. After entering the following interface can be seen, the interface description may refer to music player interface. Press OK to enter the video playback
2. Continuous playback breakpoint

Menu Options
Stop mode, press M to access the menu options. Menu options include: volume control, card catalog, delete files, delete all, circulation patterns and exit. Functions and operations and apply the same music.
Recording

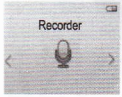

Recording Interface

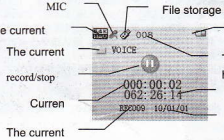

Press⏯ start / pause / continue recording again. Press **M** button to save the current recording, and ready to start a new recording. Press **M**, the system will automatically save the current recording, and return the main interface.
Menu Options
When the suspension of the process, the emergence of low signal, the system will automatically save the recording, and return to the recording interface
When the disk is full, the system will prompt "Space Man!"

Press M to access the menu options. Menu options include: card catalog, recording the type, AVR level adjustment, AVR mode

Card Catalog: View and select the current audio file stored path information. Save the selection and press M to return.
Recording type: WAV music recording, type 32K/64K/128K/256K bit rate.
AVR mode: Normal mode and AVR mode. AVR mode supports voice functions, when the external source volume is very small and for some time, go to pause recording mode, the volume threshold above to return to continue recording

AVR level adjustment: adjust the player's sensitivity to external sound source, 1-10, the greater the value, the sensitivity is smaller. The default is 5.

Radio mode

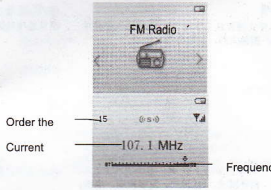

Manual Tuning: Press⏮ and⏭ the Radio fine-tuning. Press ⏮ or⏭ to automatically search for the next or a radio, for listening. Or stop and then automatically search.
Breakpoint play: **FM** state will be saved after exit and re-enter, continue to play out the last time when the radio broadcast.
Menu Options
Volume Adjustment: adjust the volume.
Save Radio: Save the current station.

Radio recording: Select the radio recording, the system interface for recording to recording. After recording the same operation and recording applications.

Remove the radio: a radio program from the saved to remove the current station.

Delete all: to save the radio program has been deleted.

Auto Scan: Select this option, press⏯ OK to return to radio interface to start automatic search for stations. When the search program, the system automatically save the station, and in the interface display 01. Continue the search, press the number then click Save. Auto search stop the search after the 30 channels, such as less than 30 channels will automatically search for the second time, stop the search. Press M to stop during the search. Can be saved by switching between the radio listening.

Common band: band range: China / United States band; 87MHz-108MHz.
Japanese band: frequency range: 76MHz ~ 90MHZ.
Picture viewing

Browse⏯ button to enter the selected picture, press the M key to exit. Press ⏮/⏭ front view images.
Menu Options
Sub-menu items: the card catalog, play settings, delete files, delete all, exit. In addition to playback settings, other menu items functions and operations the same as the previous application.

Play Set
Manual Play: the need to manually play each picture, press⏮ or⏭ to view a picture before or after one.
Auto play: Go after the adjustable time interval automatically play (2-10s), is recognized by M exit

Text Reading

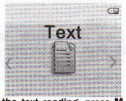

Press⏯ button to do the text reading, press M exit. Press ⏮/⏭ to read forward or next.

Menu Option

Sub-menu items: the card catalog, play settings, delete files, delete all, exit.
Reading e-books, press the **M** button appears Bookmarks menu item:
Bookmark options: View current e-book bookmark, choose Bookmark from the bookmark after the e-book to start playing.
Bookmark Delete: delete the current e-book bookmarks.
Bookmark added: save the current progress of the play to the bookmarks list, for each e-book files up to 16 bookmarks.
Exit: return reading the book
System Settings

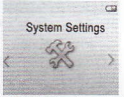

1. System Time: Press PLAY date when the choice to switch between minutes and seconds, press⏮ or⏭ to adjust the value, press M to save the settings.

2. Backlight time: In this time, if no button operation, the backlight is turned off. Setting range: 0 ~ 50 seconds, set the step size: 5 seconds. Interface in the following five black mode invalid: Picture display interface, video interface, USB interface, on-line equipment, the lyrics play interface. In the plug UHOST, card; switching function automatically turns the backlight.

3. Save electricity mode: setting no operating shutdown time, range: 0 to 60 seconds, step length: 10 seconds, save electricity patterns in addition to other than the USB online modes are valid.

4. Firmware Version: Display firmware version information.

5. Storage capacity: If the card, the display card's storage capacity and spare capacity.

6. Firmware upgrade
The player offers upgrade tools to upgrade the firmware card or repair the player's firmware.
① download the latest version of the firmware.
② the card through the reader and the PC's USB port connection, be sure to connect properly, and to ensure that no other removable disk with the connected PC.
③ run card production firmware writing tool.
First select the correct firmware, and then start at the point, the cure to the card firmware. And so complete. Then the card is inserted into a small machine, and now this catalog (firmware upgrade) to upgrade. The upgrade is complete, a small machine automatically restarts. The end of the upgrade
7. Pour screen Settings (optional)
According to open this function screen can be induced to gravity 360 degrees, such as playing pour screen when music to jilt song can be before or next one.
8. Exit: return system setting main interface.
Calendar

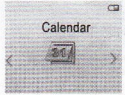

Press⏯ into the calendar, short press⏮ or⏭ earthshaking here before, long press⏮ or ⏭monthly view, then, M exit. Only have a calendar display in Simplified Chinese

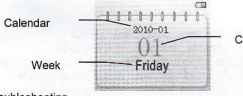

Troubleshooting
Media Player does not work or LCD does not display content
- Check the battery power.
Power button does not work
The battery is depleted.
If in the course of death, or does not boot keys can RESER
RESER (RESET button inside the headphone jack)
Unable to download file
- Check the computer's USB port and USB cable between the connection.
- Format the media player.